


Nº	CODE	DESCRIPTION	Nº	CODE	DESCRIPTION
1A	P12501	NOSE PIECE 1/4"	25	P12533	BACK-UP O-RING
1B	P12502	NOSE PIECE 7/32"	26	P12534	BACK-UP O-RING
1C	P12503	NOSE PIECE 3/16"	27	P12535	FRAME LOCK NUT
1D	P12504	NOSE PIECE 5/32"	28	P12536	RUBBER CUSHION
1E	P12505	NOSE PIECE 1/8"	29	BP125A02	AIR CYLINDER
1F	P12506	NOSE PIECE 3/32"	30-1	P12538	AIR PISTON STEM
06-1	P12507	JAW CASE FRONT	30-2	P12539	AIR PISTON
06-1A	P12508	JAW CASE FRONT	30-3	P12540	LOCK NUT
06-2	P12509	JAW CASE END	31	P12541	AIR PISTON O-RING
07	P12510	CLAMPS FOR 5,6 & 6,4 RIVETS	32	P12542	CYLINDER O-RING
07A	P12511	CLAMPS FOR 2,4-3,2-4 & 4,8 RIVET	33	BP125A03	CYLINDER CAP
08	P12512	JAW PUSHER	35	P12544	SPANNER GAUGE
08A	P12513	JAW PUSHER	36	P12545	SPANNER
09	P12514	CASE WASHER RING	37	P12546	TRIGGER PIN
10	P12515	JAW SPRING	38	P12547	CONNECTOR
10-1	P12516	JAW PUSHER SPRING	39	P12548	TRIGGER ROD
10A	P12517	FRAME CAP O-RING	40	P12549	TRIGGER
11	P12518	FRAME HEAD	41	P12550	CONNECTOR
12	P12519	CASE LOCK OUT	42	P12551	TRIGGER LEVER
13	P12520	BACK-UP RING	43	P12552	LEVER PIN
14	P12521	BACK-UP O-RING	43A	P12553	VALVE PUSHER
15	BP125A01	FRAME	44	P12554	VALVE PUSHER
16	P12523	OIL PISTON	44A	P12555	VALVE SPRING
17	P12524	OIL PISTON O-RING	45	P12556	VALVE
18	P12525	BACK-UP RING	45A	P12557	VALVE COLLAR
19	P12526	RETURN SPRING	45B	P12558	COLLAR O-RING
19-1	P12527	RETURN SPRING	46	P12559	VALVE SPRING
20	P12528	HANGING CLIP	47	P12561	INLET BUSHING NUT
21	P12529	FRAME CAP	48		
22	P12530	FRAME CAP NUT	51	P12562	VALVE CAP O-RING
23	P12531	SAFETY CAP	52	P12563	VALVE CAP
24	P12532	SETTING PIN			

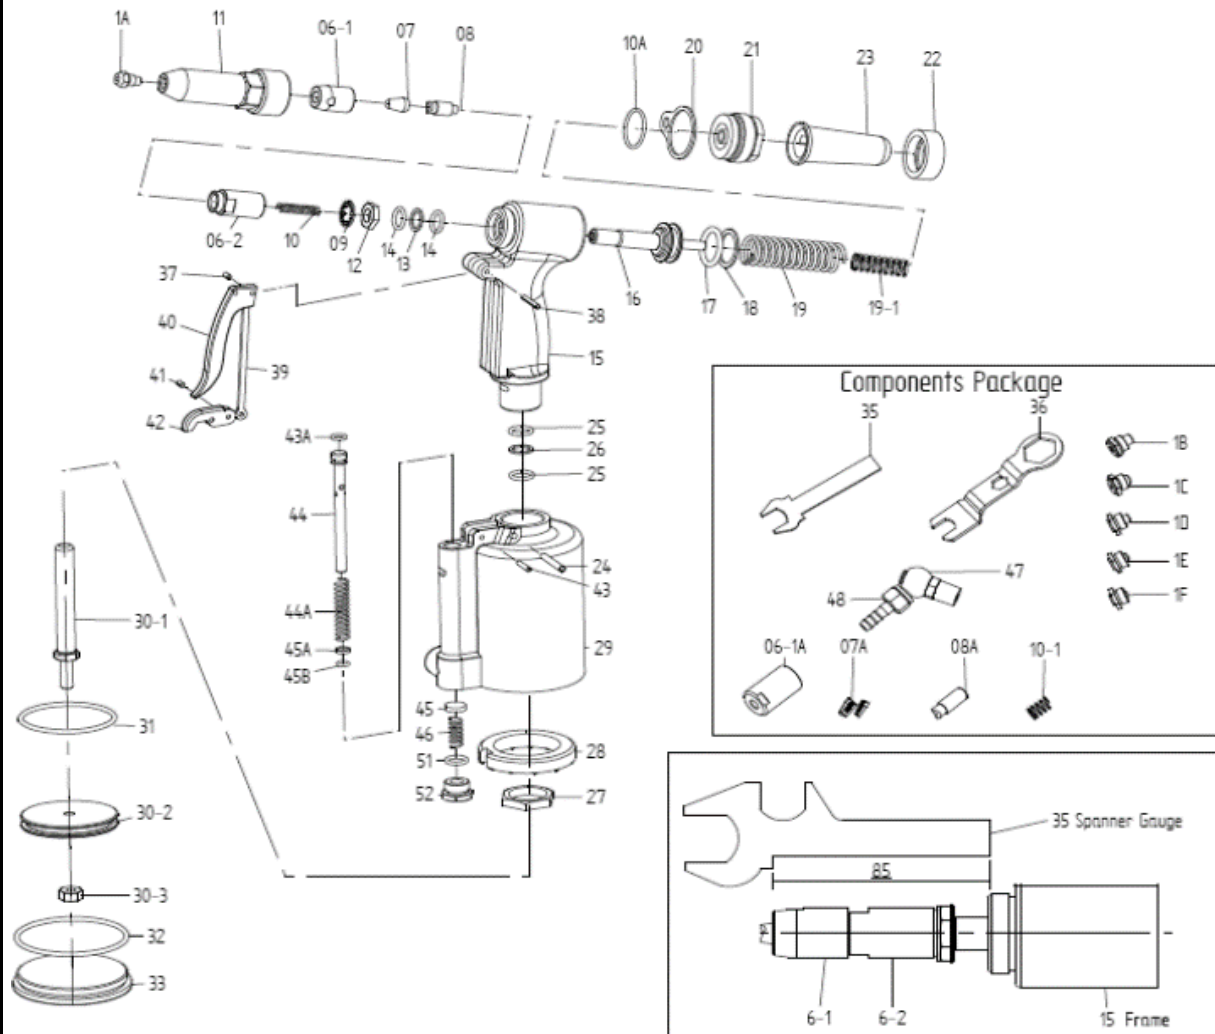

BP125A



SNA Europe does not cover the causes over negligence in tool use and/or repair, inadequate care, or abnormal usage conditions. Follow the instructions for proper use, safety, maintenance and servicing given by SNA Europe